



WARNING

To reduce the risk of injury, fire, electric shock, and property damage resulting from improper use of the appliance, carefully observe the following instructions. This unit contains electrical connections and moving parts that potentially present risk to the user.

LITHIUM-ION BATTERY MUST BE RECYCLED OR DISPOSED OF PROPERLY

TROUBLE SHOOTING:

Auto Shut-Off:

- Check to see if bag is full or intake blocked.
- Check if battery light is blinking.
- Empty bag, clean HEPA filter.

Not Charging/Charging light not blinking:

- Check charger plug connections.
- Adapter must be fully plugged in.
- Check electrical outlet.
- Battery may be damaged and need replacement.
- Battery should fully recharge in 1.5 hours.

Low Suction:

- Confirm that battery is charged.
- Check to see if bag is full or intake blocked.
- HEPA Filter may not be installed correctly.
- The reusable/disposable bag needs to be installed properly and replaced periodically.

Replacement parts are available at MetroVac.com



For a detailed instructions, scan this QR code



QUICK START-UP TIPS



The battery pack can only be inserted one way.



Insert the battery pack into the rear of Hand Vac until it “snaps” into position.



Press Power switch to “On” to get to work. Power Panel will light up.



Press touch sensor for Power Level Indicator.
LOW: Quick, light pickups.
MEDIUM: More power for larger debris.
HIGH: Maximum power, for any mess.



For hands-free vacuuming the strap easily attaches to the handle.



With an additional battery, pack you’ll never run out of power. Charge one while the other is in use. Fully charges in 1.5 hours.

To empty debris hold vacuum upright and twist the locking cap to “Open”.



Carefully remove reusable/disposable filter bag to empty contents. Clean bag inside and out. Both filters may need periodic replacement dependant on usage. Order at MetroVac.com.



Make sure HEPA filter is properly in place at all times for maximum efficiency. Purple side up for easy removal.

